

Dear Customer!

Congratulations on buying this TELME mobile telephone!

You have made the right decision.

**Content of delivery:** Mobile telephone, charging device, battery, instructions

1 Controls

**Speaker**

**Display (= Screen)**

**Arrow Keys**

- On standby:
  - ▲: Favorites (pre-set: Incoming Calls)
  - ▼: Enter phone book contact list
- In menu and phonebook: scrolling

**MENU Key**

- press to enter phone menu
- Can be used for confirm and select

**M1 - quick dial button**

- in menu: confirm selection
- long press or short press + ☑ for calling

**Pick-up/Call list-Key ☑**

- Calling: Enter the number, then press ☑
- Answering an incoming call: Press ☑
- On standby: Enter outgoing call list (dialed, received, missed)

**\* - Key**

- In standby:
  - Press twice: + (for international prefix, e.g +44 for UK)
- For SMS: Special characters: ( , . ' ' ? ; ! ' ' @ \_ ~ & + - ( ) < > { } [ ] % = / \ # \* \$ % ...)
- long press to lock/unlock keyboard: press the key for 2 seconds and the keyboard is locked. Press Menu key and \* key to unlock again

**0 - Key**

- For SMS: Space

**# - Key**

- Long press: activate/ deactivate silent mode
- SMS: switch between capital, small letters & numbers



13 SAFETY INSTRUCTIONS

- Switch off mobile telephone in hospitals or near medical devices. There should be a minimal distance of 20 inches between **pacemakers** and switched-on telephones.
- Do not drive a **vehicle** while holding a mobile phone in your hand. Follow the laws and traffic rules of the country you are in.
- Switch off the mobile phone while you are in an **airplane**.
- Switch off the mobile phone near **petrol stations** or other areas with explosive materials.
- Never directly shine the LED flashlight into the eyes of humans or animals! (Protection class 3).

The power supply is the power off mechanism of the device. The desktop charger must be close to the device and be easily accessible.

SAR-value: The maximum weight determined by the EU is 2.0 W/kg. This model has a maximum of 0,798 W/kg.

14 INTENDED USE

**This mobile telephone is intended for mobile use. Nevertheless protect it from moisture (rain, bathroom...) and impacts. Do not expose to prolonged direct sunlight.** Other use as described leads to damage of product and furthermore can lead to hazards such as electrical shock, fire and so on. Do not alter nor rebuild nor open the housing. **The power adapter is designed for use in household wall outlets to public electricity grids with 230 volts / 50 Hz (10/16A) voltage.**

15 TECHNICAL DATA

Dual band GSM 900/1800MHz  
Dimensions: 105x47x10mm  
Weight: 74g

Battery: Li-Ion 3.7V / 650mAh  
intercambiabile  
Standby-Time: 155h  
Talk time: 155min

warranty period: 24 months (6 months for the battery)

**M2 - quick dial button**

- in menu: one step back
- long press or short press + ☑ for calling

**End/Back/ On/Off-Key**

- During a call: Terminate
- In the Menu options, press to return to Idle mode
- On/off Key: press key for 5 seconds



Jack for charging adapter



TELME

C140

Emergency Button



Battery door

PartNo: 55253-ENG, ENGLISH, C140\_V3.TL\_201311  
Hotline: UK: 0800 472 5400 IR: 066 77 17535  
TELME Service Center Industriezeile 36 4020 Linz, Austria www.telme.at

2 INSERT SIM CARD

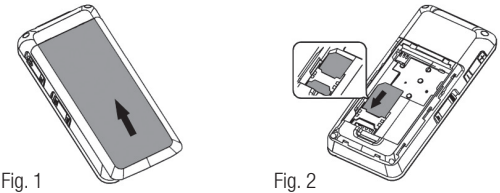 


Figure 1: Remove battery cover  
Figure 2: Insert SIM card with the gold contacts facing down into the SIM card holder

3 INSERT BATTERY AND CHARGING

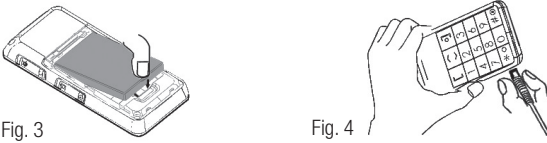 


Figure 3: Insert battery  
Slide cover close with a click  
Figure 4: To charge plug the charger cable into the jack on the left side of the device  
During charging: Bar (battery) on the display fills  
Battery charged: Bar (battery) shows full  
*Note: Charge battery at least 4 hours before the first call !*

4 DISPLAY SYMBOLS (SCREEN)

	battery strength		signal strength
	Missed call		roaming mode
	Silent		Alarm on
			Vibration on

5 FIRST STEPS

**Switch on:** the phone by pressing the power on/off-key for at least 5 seconds.

**Switch off:** by pressing power on/off for 5 seconds again. When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with .

**PIN-Code:** The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.  
• Switch off your PIN-Code: In menu: **Settings**→ **Security** → **Power on PIN1** → **PIN off**.

**Entering Menu:**  
▪ press -key ( between and ).  
▪ scroll through menu points: with and .

▪ confirm/ choose with . For navigating in the menu, use to confirm and to cancel / take a step back in the .

*Note: due to inactivity, the phone lights and screen turn off after a while. To turn on again, press any key.*

**Incoming Call:** Pick up call: Press -key –  
Reject call: Press -key

**End call:** Press -key.

**Dial:** Enter the telephone number via the keypad (including area code with 0) → start call with .

**Redial list:** press -key, scroll through call list with (all dialled, missed and received calls) and select a number and start call with .

**Handsfree Speaking:**  
During a call handsfree function can be switched on or off: by pressing the M2 button **Options** → **Handsfree**.

6 PHONE BOOK

Saving names and numbers (start with international prefix, e.g. +44 for UK).  
Enter menu in standby mode with , → menu points: **Dial to, Edit, Delete, Create, Copy, Move, Status**.

**Storing phone book entries (Name & Number):**  
Enter menu with → continue to **Phonebook:** → continue to „**Create**“ → continue to „**Save to SIM/Save to ME**“ enter name via the keypad (See chapter 8, Write SMS for text entry), Enter number, and press key to **Save**.

**Searching phone book entries:**  
Enter phone book with   
▪ Scroll through the entries with and . Or:  
▪ Search names: enter the initial letters of the searched name via the keypad (scroll through with When the requested name is shown, press to start a call.

**M1 and M2 quick dial buttons:**  
In the idle screen key in the phone number to be saved. Press 2 times and select either Save to or Save to . Confirm selection with .

To dial a number from the speed dial keys.  
Press the / key at least 2 seconds. The number is dialled automatically.

7 EMERGENCY FUNCTION

You can store a total of 5 emergency numbers (family, neighbours, friends, emergency services). In case of emergency these preselected numbers will be dialed automatically in a sequence, if the emergency key on the back of the phone gets pressed and held.  
A continuous warning tone then starts in “loudspeaker mode” during emergency, so you and people nearby are warned due to the emergency! If the first number cannot be reached, the second number will be called automatically. If the second number in row cannot be reached, the third will be called. (max. 3 rotations of the 5 numbers).

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 112 will be dialed.

Saving emergency numbers: Enter → **Settings** → **SOS Setting** → **SOS-contact list** → press key → **Create**: enter the name and confirm with → enter the number and again confirm with . For the next emergency number please repeat this process accordingly. Settings editing or deleting emergency number go to → **Settings**→ **SOS Setting** → **SOS-contact list** and press → **Edit/Delete**. For defining your emergency message go to **Settings**→**SOS Settings**→**SOS message** (writing text: see chapter 8) For deactivating the SOS function: Enter → **Settings**→**SOS Setting**→**SOS button**→ → **Disable** →

*Note: If you want to save emergency numbers from official services, police, fire department, etc., you have to clarify this with the certain institution. No liability will be assumed for possible costs incurred if you dial accidentally.*

8 SMS MESSAGES

**SMS (Short Message Service)** are written messages with a maximum of 160 characters.

**Receive SMS:** A short signal and a registration on the display inform you about a new, incoming SMS message. With you can read the message immediately or see a list of messages which have already been received. Enter → **Short Message** → **Inbox**.

**Write SMS:** Enter → **Short Message** → **Create new:** → The text entry is done via the letters on the keypad.

	. , ! ? ‘ “ @ : 1		j k l 5 £		w x y z 9 ý þ
	a b c 2 ä æ å à		m n o 6 ö ø ó		Space; 0
	d e f 3 è ê ë		p q r s 7 ß \$		Special characters: , . ? ; :
	g h i 4 i í î ÿ		t u v 8 ü ú		! “ ’ @ _ ~ & + - ( ) < > { } [ ] ...

Every key has several characters, which appear through pressing the key several times. For example: 2x , 1x , 3x , 3x , 3x for Hallo.

Switch between different entry methods by pressing :  
**abc-only small      ABC-only CAPITAL      123-Numbers**

**Send SMS:** Select **Only Send** with and enter number or search from phone book (-key, select contact with ) Press to send SMS. If you want to send and save a message, select “**Save and Send**”. If you only want to save a message, select “**Save only**”

**Alarm:**  
in standby mode: key → **Tools** → select **Alarm** → **Alarm 1, 2 or 3**. To switch on an alarm → **On** and key in the time for the alarm. With you confirm. You also can select either **One shot alarm** or **Weekly alarm**. Select the days for the alarm (choose days with and confirm with -key).

If the alarm rings, end with . Use mute function with to reactivate the alarm after 5 minute.

9 OTHER FUNCTIONS IN SETTINGS

Enter menu with → continue to **Settings:** →

- **Profiles:** To choose a phone profile (f.i. Silent) and configure your personal settings.
- **Network settings:** define settings for call forwarding and call waiting.
- **Display Settings** to choose other languages, adjust contrast of the LCD display, the time and the date
- **Keypad Lock:** To select the time before the keypad is locked

- **Security:** Activate, deactivate or change PIN and phonecode (default phone code: 0000).
- **Recover Default Value:** Reset the phone to factory settings.

10 DISPOSAL

- **Disposal of packaging:** Packaging materials are recyclable and should enter the recycling process.
- **Disposal of battery:** Do not insert battery into household rubbish for disposal! You are obligated to return used batteries. These can be handed into local collection areas or to specialty shops.
- **Disposal of Device:** Take care of the environment: When this product is taken out of service, do not throw it into the household rubbish, but dispose of it, where old devices are accepted and brought into an eco-friendly disposal/recycling procedure.



11 FREQUENTLY ASKED QUESTIONS

- **Screen shows “Insert SIM card! Only emergency call 112“:** Check the direction of the SIM card
- **A call failed:** Check the selected telephone number and area code again for accuracy (area code entered?).
- **The mobile telephone display is blank/black: Telephone is in energy saving mode (press any key) or it is switched off** (press for 5 seconds to switch on).

- The mobile phone **does not react:** Remove battery, re-insert and switch on the device. If there is still no reaction, refer to the service centre.
- **The charging procedure does not begin:** This can take several minutes. If there is no reaction after 30 minutes, refer phone to service centre.

12 DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Productions- and Sales-GmbH & Co.KG., hereby declare that the design of the device conforms to the relevant EU directives described below.

**Item Description: Dual Band Mobile Phone Item Number: C140**  
Relevant EU Directives for Radio /Telecommunication Systems 1999 / 5 / EU

R & TTE Directive 1999 / 5 / EC

**2200**

Harmonised EN Professional and Basic Standards:  
The item corresponds to the following norms:  
Health: EN 50360:2001  
Radio: EN 301 511 V9.0.2

Safety: EN 60950-1:2006+A1:2009  
EN 62209-2:2010,  
EN 62209-1:2006  
EN 50360:2001

EMC: EN 301 489-7 V1.3.1  
EN 301 489-1 V1.8.1

Signed:   
Eveline Pupeter  
General Manager  
Issue date: 01. 03. 2012  
Area of Issue: Linz/Austria