

TELME EMERGENCY SYSTEM

You can store up to 4 emergency numbers (family, neighbours, friends, emergency services).

- In case of an emergency press and hold the emergency button. The emergency key will still work when the key lock is enabled.
- Press the emergency button to make an emergency call. Up to 4 numbers will be called in a predetermined order until the emergency call is answered. This process is repeated 3 times.
- Note: The phone does not recognize whether a person, an answering machine or voice mail takes off and sees this as a successful emergency!
- To abort the emergency call press long
- During the emergency call sequence, the mobile telephone sounds a warning signal to alert the people around you about the emergency.
- If no emergency number is stored, your prepaid-card has run out or you are outside of the reception area of your network operator, the international emergency number 112 will be called.

Note: If you want to save numbers from official services, police, firefighter, etc. as emergency numbers, you have to clarify this with these institutions. No liability will be assumed for possible costs incurred if you dial accidentally.

Saving emergency numbers:

Go to **SOS** ⇒ **emergency call-numbers** ⇒ choose the contact number (1-4) you want to save or edit ⇒ select **Options** with ⇒ **Options** ⇒ **Edit** ⇒ enter the emergency number of your choice ⇒ confirm with .

Enable the emergency button:

Go to **SOS** ⇒ **Status** ⇒

- to enable the emergency function, set the status to **On**
- to disable the emergency function, set the status to **Off**

ALARM

Enable/disable an alarm:

Enter menu with ⇒ **Alarm** ⇒ choose an entry with or and **Edit** with ⇒ press to enable/disable this alarm-entry ⇒ scroll down ⇒ enter alarm time ⇒ scroll down ⇒ set: Once, Everyday or Custom ⇒ scroll down ⇒ select ringtone and vibra setting with ⇒ confirm with ⇒ press to save the alarm entry.

Stop an ringing alarm: press

Mute a ringing alarm: press (rings again in 5 minutes).

RADIO (MINI USB-HEADSET REQUIRED)

Enable/disable the FM Radio:

Enter menu with ⇒ **music** ⇒ **FM Radio** ⇒ or .

Search/enter a station:

- Search channels with or . (automatical search).
- When the frequency of the desired station is known, select **Options** with ⇒ **Manual input** ⇒ enter with keypad.

Adjusting the volume:

- Use and on the left side of the phone (does not work in auto. search).

CAMERA

Your mobile phone has a camera.

Take a picture: turn on the camera with ⇒ press to take a shot

Pictures: Here you fi nd your stored shots. Enter menu with ⇒ **Pictures**.

Availiabe **Options** for an image are: **View, Image information, Rename, Delete, Storage** (decide whether to store your pictures in the phone storage or on a memory card)

PC-CONNECTIVITY

You can connect your mobile phone to a PC to transfer pictures to your computer.

Connect your mobile phone to a PC: Turn on your mobile phone ⇒ use a USB cable to connect the phone with the PC ⇒ after this the computer will recognize the phone as a «mass storage» and you can transfer the pictures.

FREQUENTLY ASKED QUESTIONS

The mobile telephone display is blank/black:

Telephone is in energy saving mode (press keylock). Or it is switched off _ press for 2 seconds to turn it on.

The mobile phone is not responding:

Remove battery, re-insert and switch on the device again. If still no response, please contact the Service Center.

The charging process will not start:

It may take a few minutes. If there’s no response after 30 minutes, please contact the Service Center.

SUPPORT

- **TELME Service Center**
Industriezeile 36 · 4020 Linz · Austria
Phone: +43 (0)732 · 77 77 17 · 0
Web: www.telme.eu

WARRANTY

- This warranty is valid only if original TELME batteries were used.
- Mobile phone: 12 month
- Battery: 6 month

PACKAGE CONTENT

- Mobile phone
- Battery: Li-Ion 3.7V / 1000mAh
- USB cable with USB AC - adaptor
- Desktop charger

TECHNICAL PRODUCT DESCRIPTION

- Dualband GSM 900/1800MHz
- Dimensions: 105,5x54,8x15,7
- Weight: 99g
- Akku: Li-Ion 3,7V / 1000mAh, interchangeable
- Standby-time: 210h
- Talk time: 200min
- 1,3 Megapixel Camera
- Internal antenna: SAR 0,936 W/kg

Subject to print errors, mistakes and technical changes.

DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

Kind of product: **Dual Band Mobile Phone**
Article number: **TS100**
Governing EU-regulations: Council Directive R&TTE 1999/5/EC
Radio equipment and telecommunications terminal equipment
Harmonized EN standards:
Health: EN 50360 - 2001; EN 62209-1 - 2006; EN 62209-2 - 2010
Safety: EN 60950-1 V. 2006 + A12 + A11 + A1: 2011;
EN 50332-1 2000-11
EMC: EN 301 489-1 V1.9.2; EN 301 489-34 V1.3.1
Radio spectrum: EN 301 511 V9.0.2

CE 0678

Eveline Pupeter
CEO

01.06.2013, Linz/Austria

DISPOSAL

Disposal of packaging:

Packaging and packaging materials are recyclable and should always be returned.

Disposal of batteries:

Batteries must not be disposed of with domestic rubbish! As a consumer you are required by law to recycle used batteries. You may return them to your local collection point or to the dealer.

Disposal of the device:

Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.

CORRECT USAGE

- This mobile phone is robust and designed for mobile operation. However, it must be protected from moisture (rain, bath...) and impact.
- Do not expose it to direct sunlight.
- Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.
- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16A) alternating current.
- The power supply is the power off mechanism of the device. The desktop charger must be close to the device and be easily accessible.

SAFETY INSTRUCTIONS

- Switch off the mobile phone in hospitals or in the vicinity of medical equipment, as the mobile phone may cause them to malfunction. Keep your mobile phone a minimum distance of 20 cm away from pacemakers, if it is turned on.
- Never drive a car while holding the mobile phone in your hand. Observe national law and traffic regulations governing the use of mobile phones in traffic.
- Always turn off your mobile phone inside an airplane.
- You must switch off the mobile phone in the vicinity of petrol stations and other places with explosive materials.
- Don’t shine the light directly into the eyes of people or animals.
- If the speaker or headset is set to a high volume this can cause hearing damage. Never hold the phone to your ear when the speakerphone mode is activated or the emergency button is pressed.
- The device and its accessories may contain small parts. Keep this product out of reach of small children.
- As a precaution, we recommend disconnecting the charger from the phone during a thunderstorm.



PartNo: TS100_Manual-V4_54247-ENG_201311

INSERTING THE SIM CARD

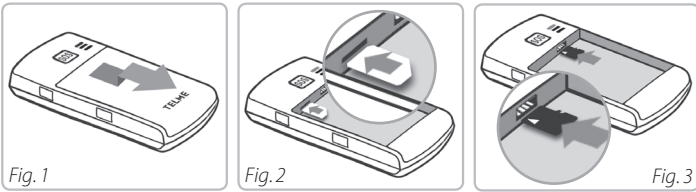 


Fig. 1: Remove the battery cover
Fig. 2: Insert the SIM card with the golden chip downside
Fig. 3: Insert the memory card (optional).

INSERT THE BATTERY AND CHARGING

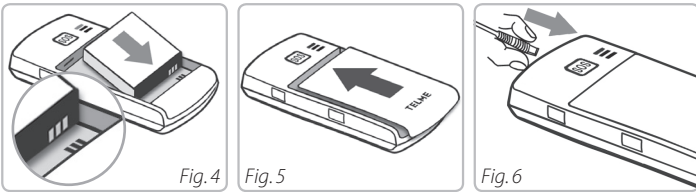 


Fig. 4: The battery contacts have to touch the gold coloured contacts of the mobile phone.
Fig. 5: Slide battery cover back to its previous position until it
Fig. 6: Plug the charging cable into the socket

- Battery is charging: bars in the battery icon fill up
- Battery is fully charged: bars in the battery icon stop moving

Please note: The battery should be charged for at least 4 hours before your first call. Use only batteries and chargers which are approved for use with this model.

